



| | | | |
|------------------|----------------|---|------------------------|
| DESIGN # | DRAWN BY CP | DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA | |
| CHECKED # | APPROVED # | DRAWING NO. DSI 9204 | REV. A SHEET 1 OF 1 |
| DATE 01.04.26 | | TITLE DART 350/355 SKID/STEP INTERFACE NTS | |
| A | 01.04.26 | NEW ISSUE | |


DART SERVICE INSTRUCTION

TO AMEND INSTALLATION DRAWING D350-591 REV. D

CANADIAN STC: SH92-6

US FAA STC: SH967NE

WHEN INSTALLING THE DART D350-591 STEPS ON DART D350-636 SKIDTUBES (REF. CANADIAN STC SH99-7, FAA STC SR00646SE), THE AN3-37A BOLTS (2), MS21042L3 NUTS (2), AND AN960JD10 WASHERS (2) CALLED UP IN THE PARTS LIST OF D350-591 REV. D ARE NOT REQUIRED. USE THE AN3-6A BOLTS (4) AND AN960JD10 WASHERS (4) THAT ARE PROVIDED WITH THE SKIDTUBES INSTEAD, AS SHOWN BELOW.

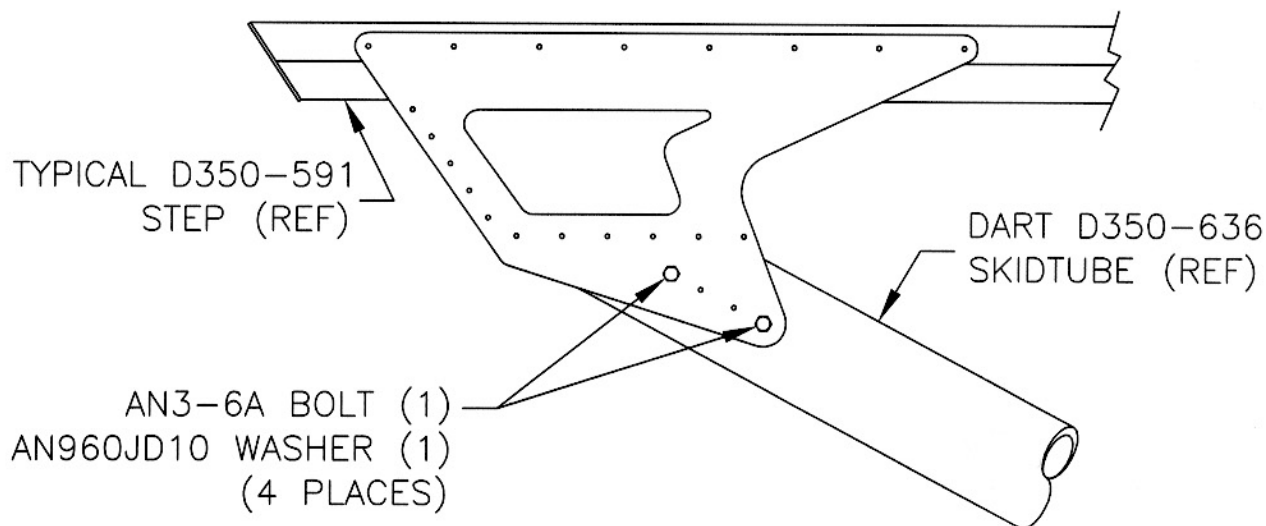

Copyright © 2001 by DART AEROSPACE LTD

THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.